

RetraSafe

Safe Ladder System

Attention!


To comply with Health and Safety guidelines check device before and after every use for wear and tear and do not use if damaged in any way.

Make sure it is securely fastened to the ladder before travelling if the device is transported with the ladders.

We **highly recommend** that the product is used as part of fall arrest system and users should follow local working at height regulations of the country you are in.

Thoroughly read the instructions before attempting to set up the Retrasafe ladder system.

The product can support a maximum of 150kg and **must not** be used freestanding. Before use check the maximum safe working load of the ladder and do not exceed the ladder's safe working load or 150kg dependent on which is lower.

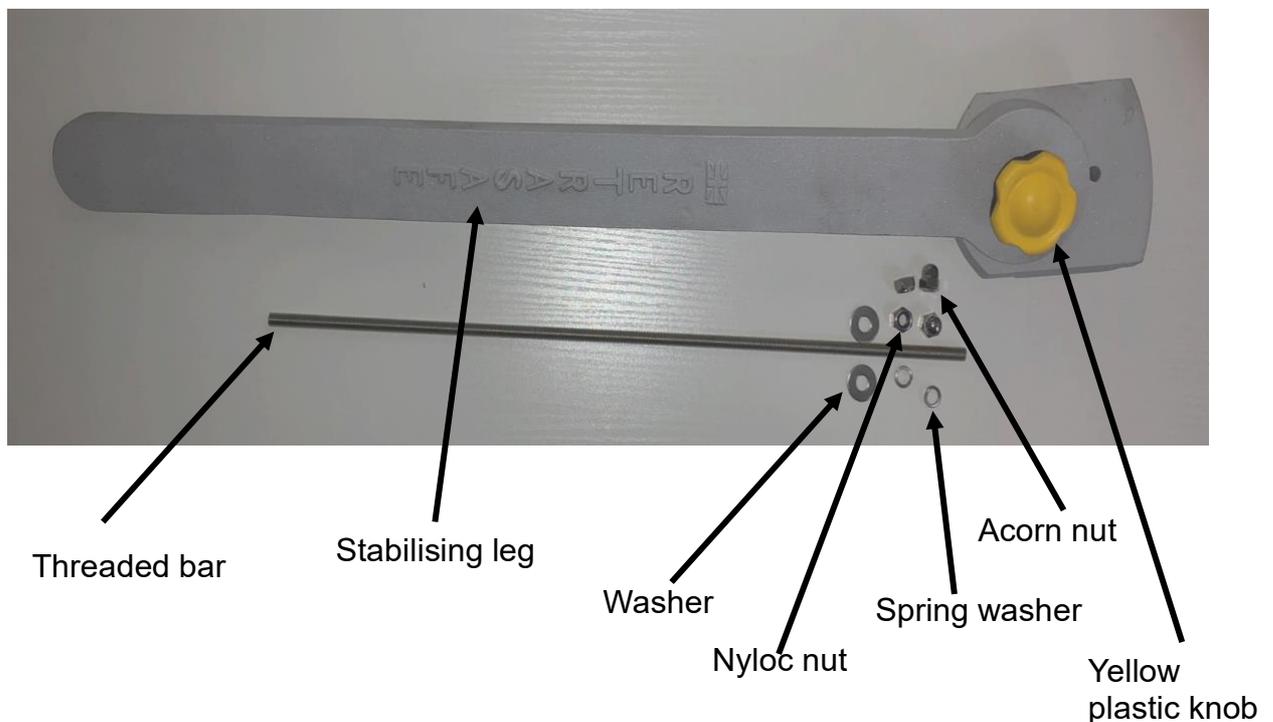

Instructions:

1. The device should be attached in the **storage position** (shown below) for easy deployment.



2. To use the legs loosen the yellow plastic knob, pull the stabilising leg out and twist it down to the required position. Push the leg inwards and make sure the interlocking gears have locked into place then tighten the knob. **If you can see the gear threads it means the leg is not locked into place.**

Note: The easiest way is to place the ladder at slightly steeper angle than required and lock the stabilising legs into last available position. The stabilisers may not be touching the ground but slight adjustments to the ladder can be made by moving the ladders backwards to ensure the legs are touching the ground.



Gear threads between the stabilising leg and clamp.

3. Make sure all 4 feet (ladder and stabilisers) are touching the ground before using the ladder.
4. Use the whole unit to create a safe working system.



5. Place device into storage position once ladder is not required. Please **do not** rest the ladder on the yellow plastic knobs.

For more information and to download this guide visit:
www.retrasafe.com

To watch a step-by-step tutorial please visit our YouTube channel.

RetraSafe Ltd and any distributors shall be under no liability in respect of any defect arising from fair wear and tear, wilful damage, negligence, abnormal working conditions, failure to follow the Seller's instructions (whether oral or in writing), misuse, alterations, or repair of the Goods without the sellers approval. The product is guaranteed for 2 years against defects from faulty materials or workmanship. This guarantee does not affect your statutory rights.